




WHAT'S IN THE BOX




* Change the speaker before first use. For safety and peak performance, use genuine JBL batteries. Non-original batteries may pose safety and reliability risks.

** Power cord quantity and plug type vary by regions.


BLUETOOTH PAIRING

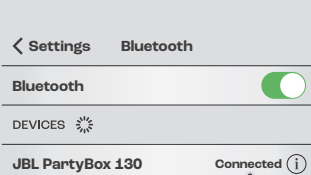

PLAY

 


LIGHTSHOW

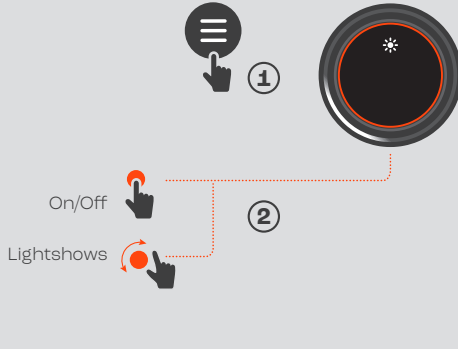

Apply lightshow presets and more with the JBL ONE app.

APP

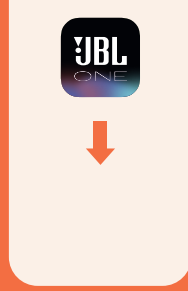

Download and install the JBL ONE app to get more from the product.



MICROPHONE



GUITAR

 


OPTICAL



* Specify "PCM" as the digital audio output method on the TV.

MULTI-SPEAKER CONNECTION




CHARGING



Due to local laws and regulations, the Powerbank function in certain regions. Please refer to local regulations. | 由于当地法律法规的限制, 移动电源功能在某些地区可能无法使用。请参考当地相关规定。

BATTERY REPLACEMENT

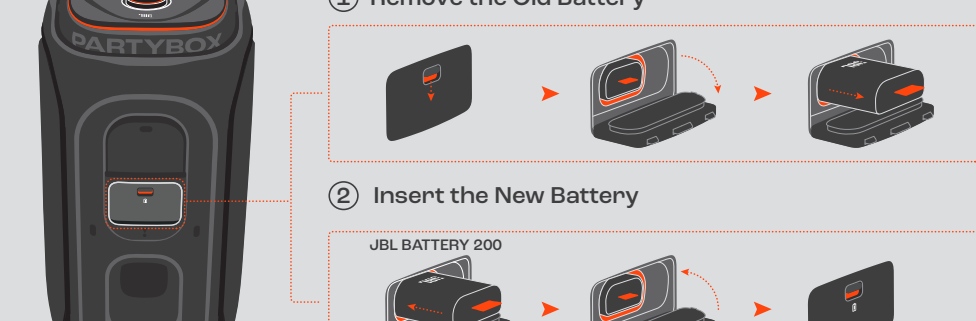

① Remove the Old Battery



② Insert the New Battery



Change the battery before first use.

